



ADD HILOOK CAMERA TO NVR FROM ACROSS A NETWORK USING PC

- 1 Download SADP Tool from HIKVISION.

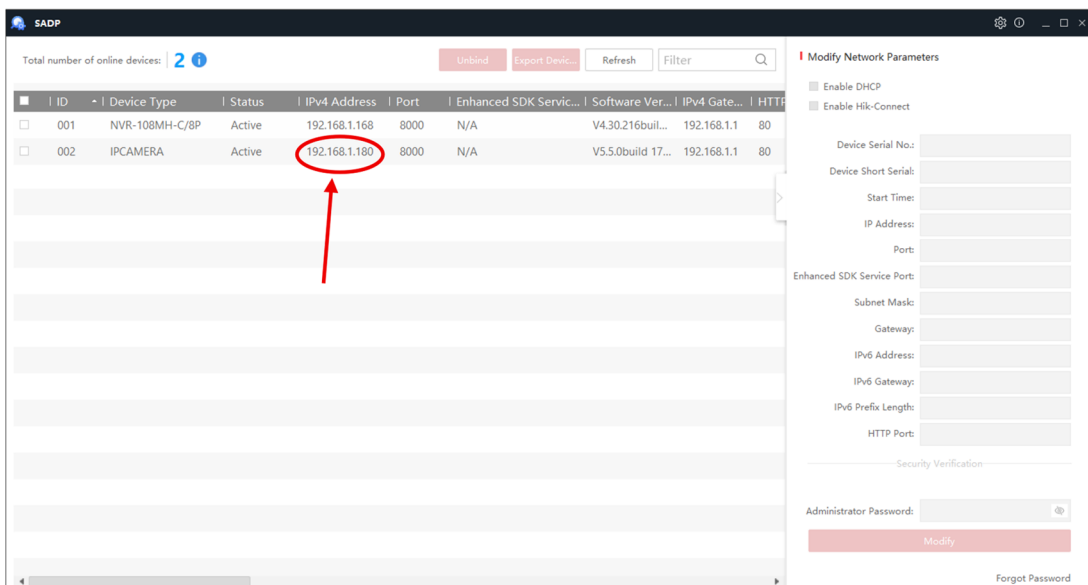

Open SADP Tool and you will see both NVR and IP Camera. Note down the IP address of the HiLook IP Camera. Double click on the IP address of the NVR.


- 2 You will open the landing page for the NVR.

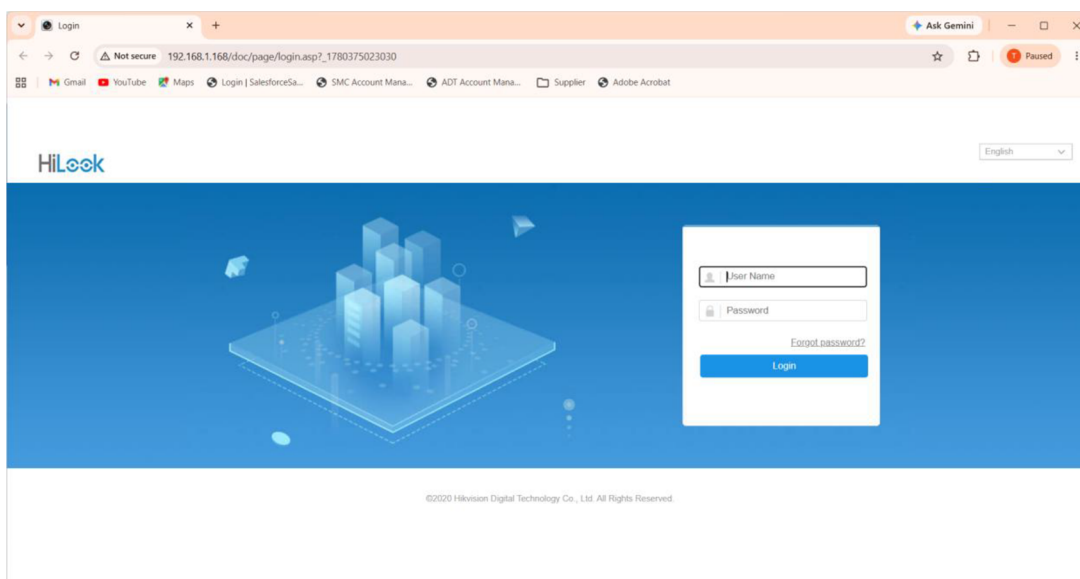




ADD HILOOK CAMERA TO NVR FROM ACROSS A NETWORK USING PC

- 3 Type in the Username which will be 'admin' and the password for your NVR.

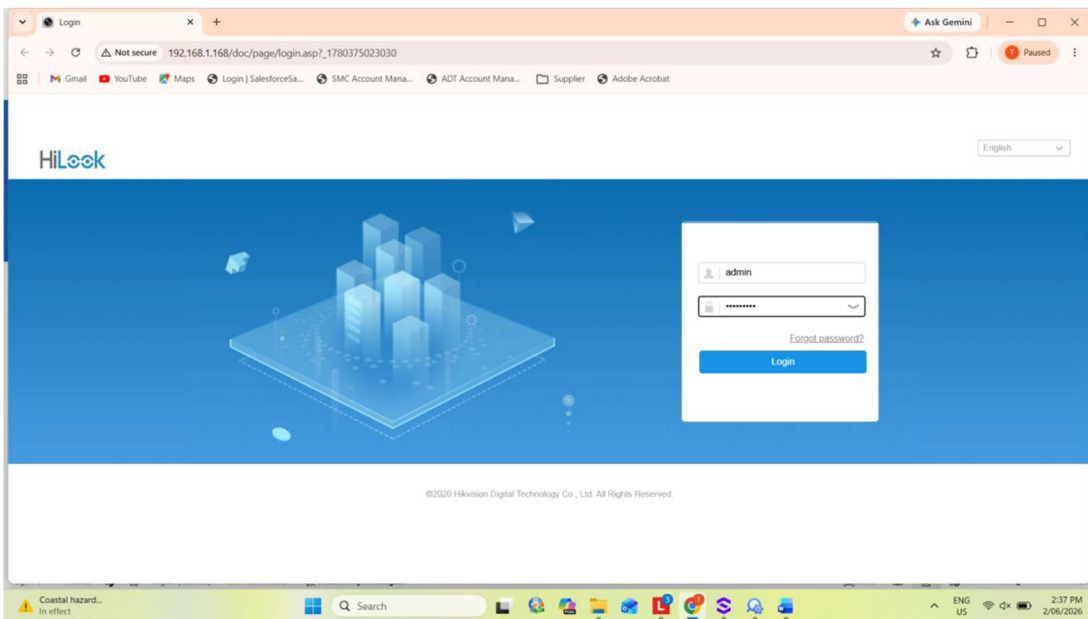


- 4 Your NVR webpage will now open.

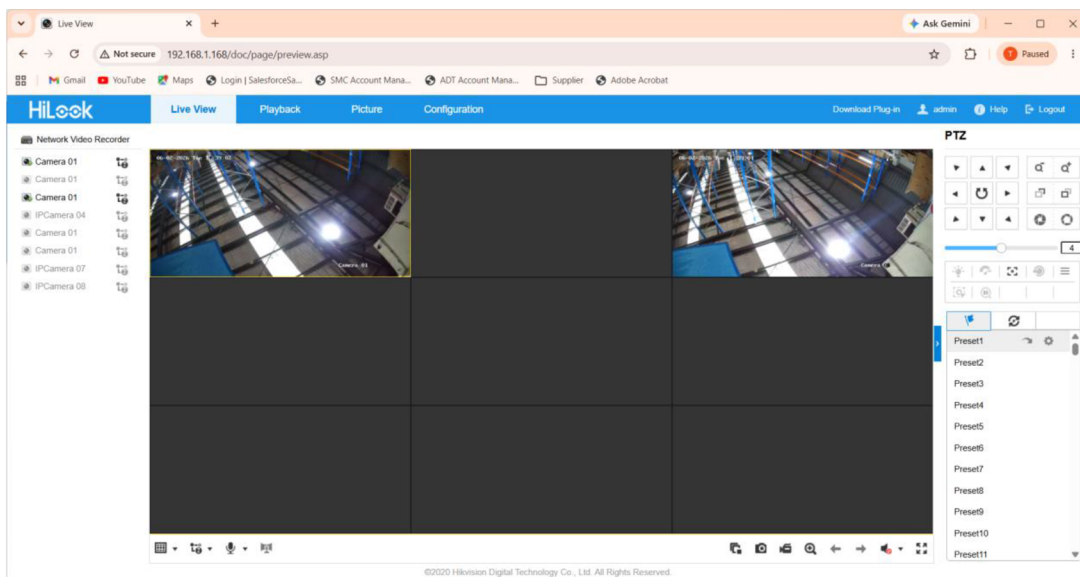


ADD HILOOK CAMERA TO NVR FROM ACROSS A NETWORK USING PC

5 Click on 'Configuration' then 'System'

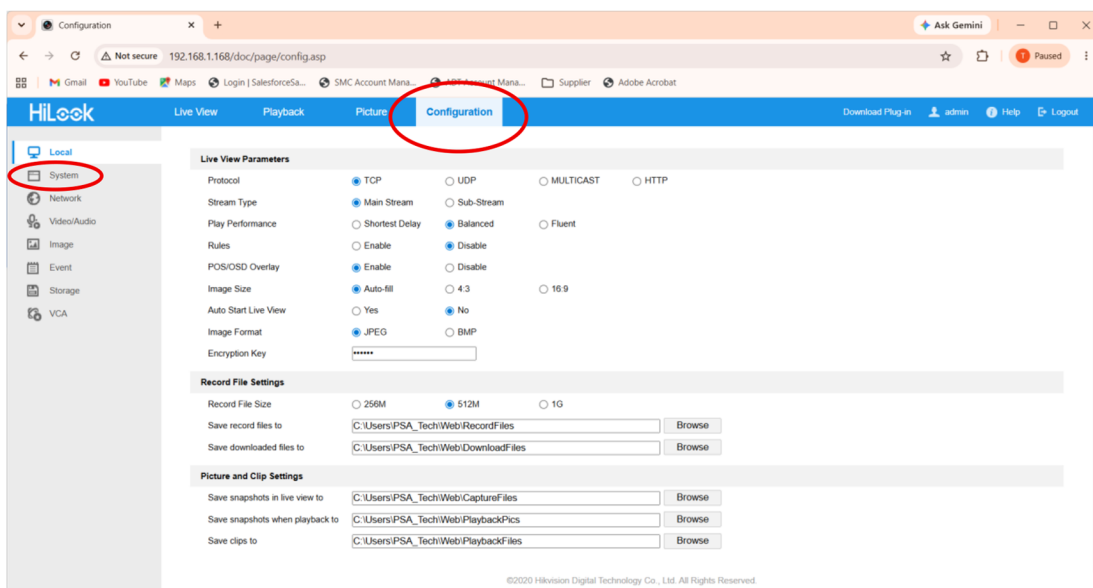


6 Click on 'Camera Management' then 'PoE Channel'

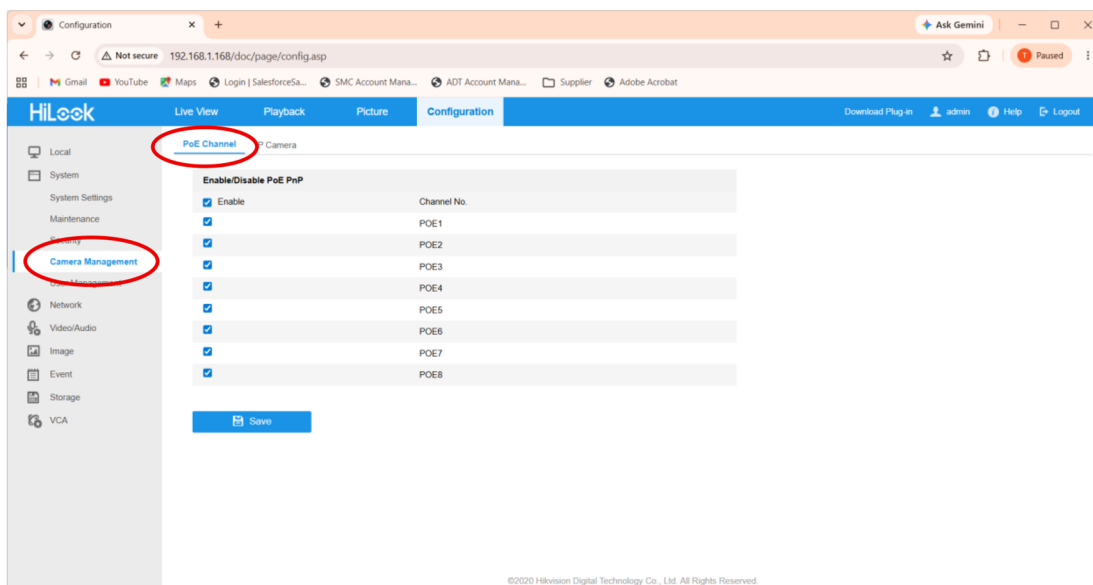


ADD HILOOK CAMERA TO NVR FROM ACROSS A NETWORK USING PC

- 7 Untick one of your unused PoE Channels to make way for your Network camera.

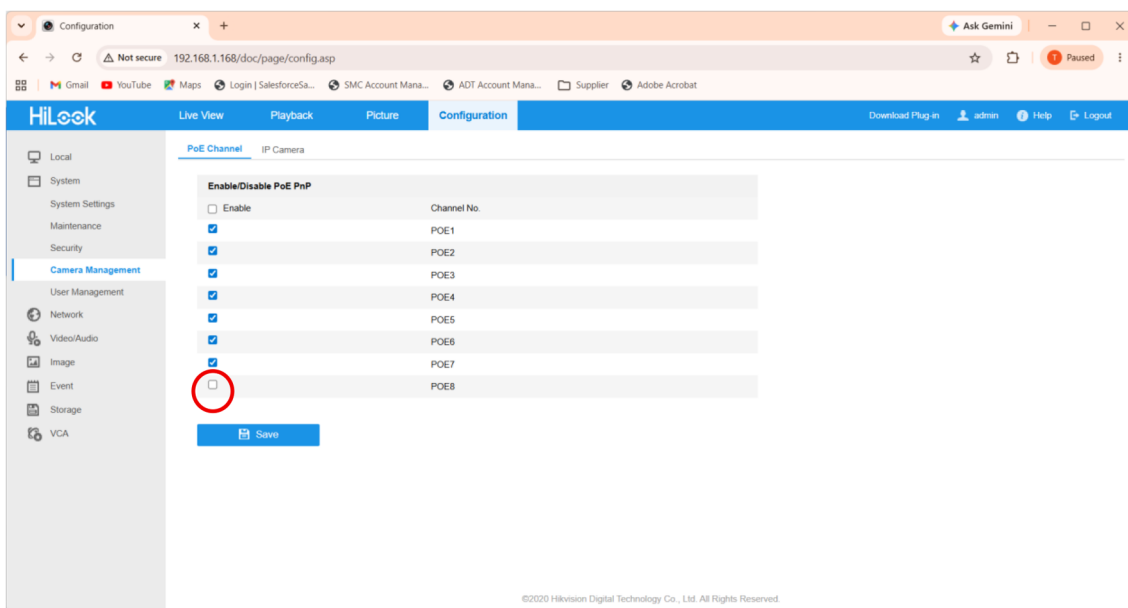


- 8 Click on 'IP Camera' then click 'Add'

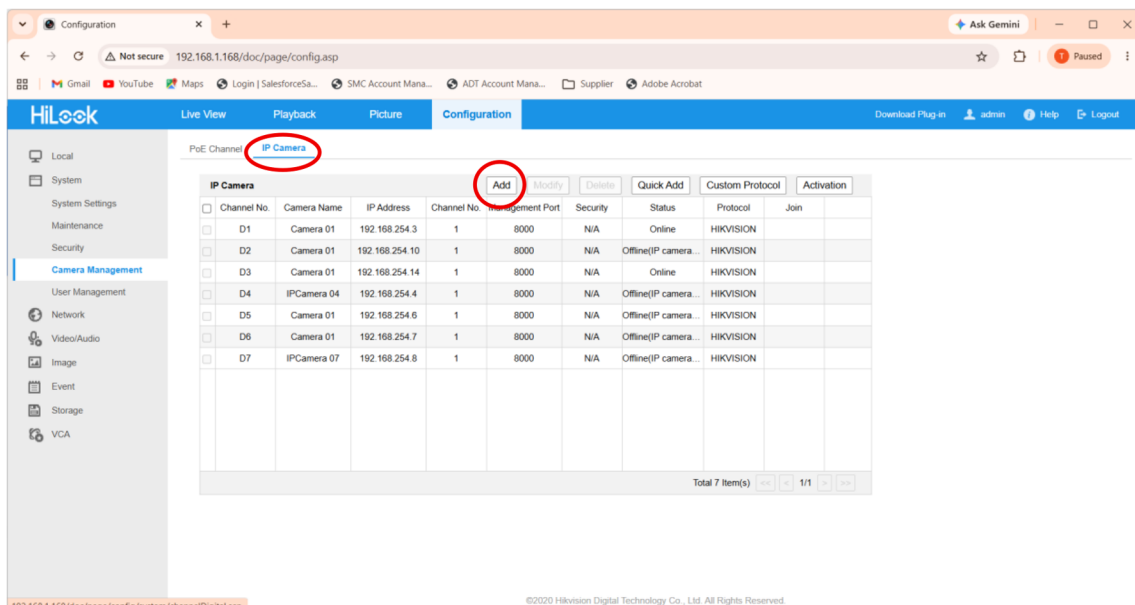


ADD HILOOK CAMERA TO NVR FROM ACROSS A NETWORK USING PC

- 9 Type in the IP address of your Network IP camera that you noted in SADP Tool.

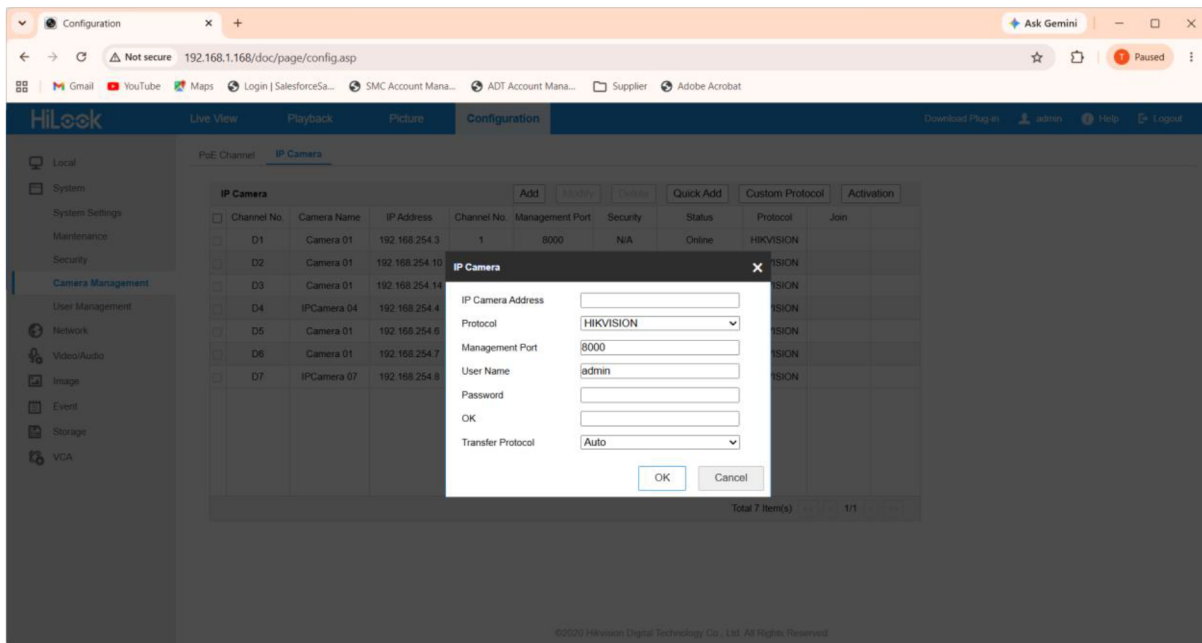


- 10 Also type in your camera's password, then click 'OK'

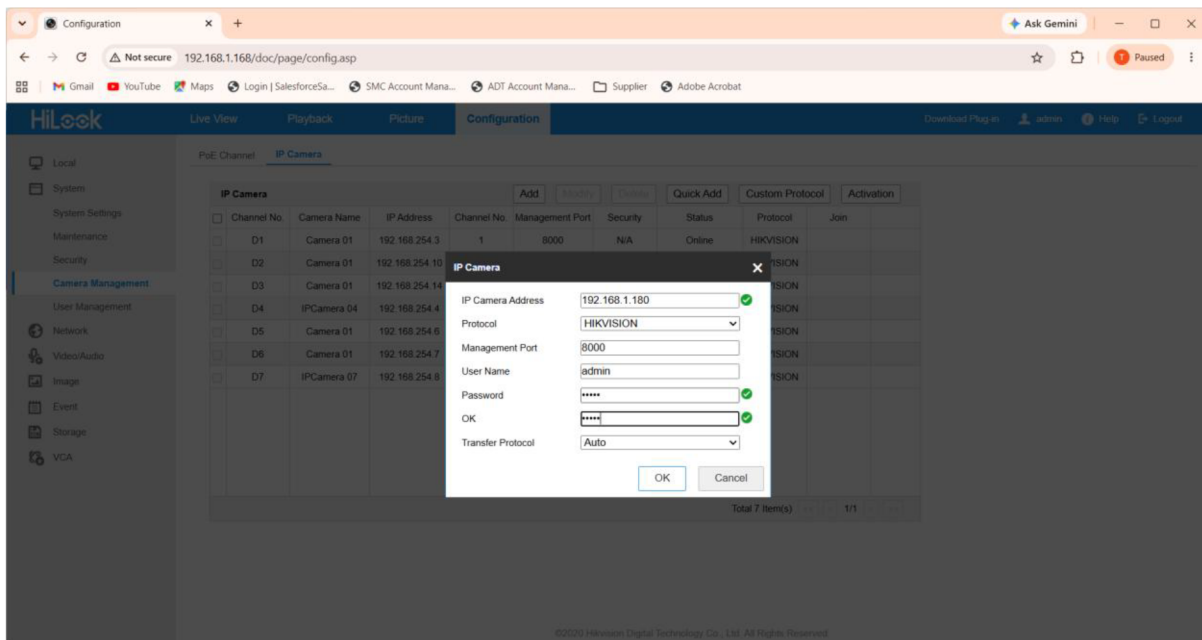

ADD HILOOK CAMERA TO NVR FROM ACROSS A NETWORK USING PC

- 11** Your Network IP Camera will now appear in the free IP channel which in this case is D8.

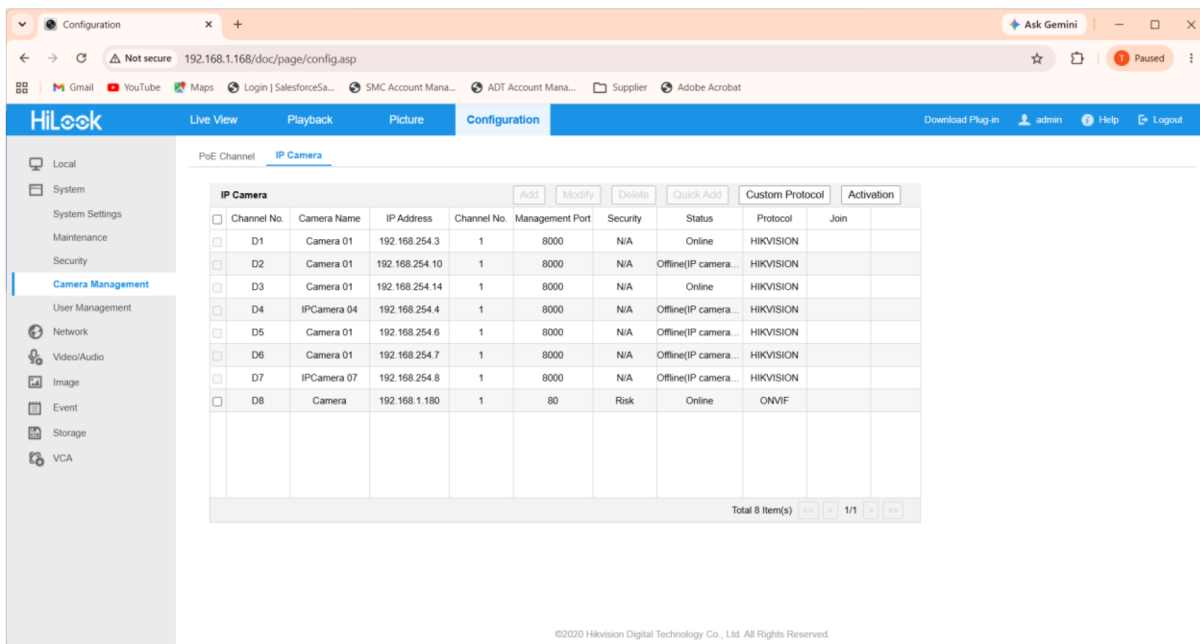

- 12** Your Network IP camera will now appear in the D8 live preview. You can drag and drop these cameras views to suit your layout.

