

CONNECT 5MP CCTV CAMERA TO IP INTERCOM VIA SWITCH

Products

- CEN28WSK-IP
- CENIPCT528DL2-IN x2
- HLNS-0105P-35

Summary

Connecting CCTV cameras to IP intercom via a PoE switch. Plug door station, internal monitor and the two IP cameras into the switch. Plug in data cable from UPLINK port to your modem/router.


Add IP cameras to Intercom

1. Tap on SET




CONNECT 5MP CCTV CAMERA TO IP INTERCOM VIA SWITCH


2. Tap on SETTINGS wheel

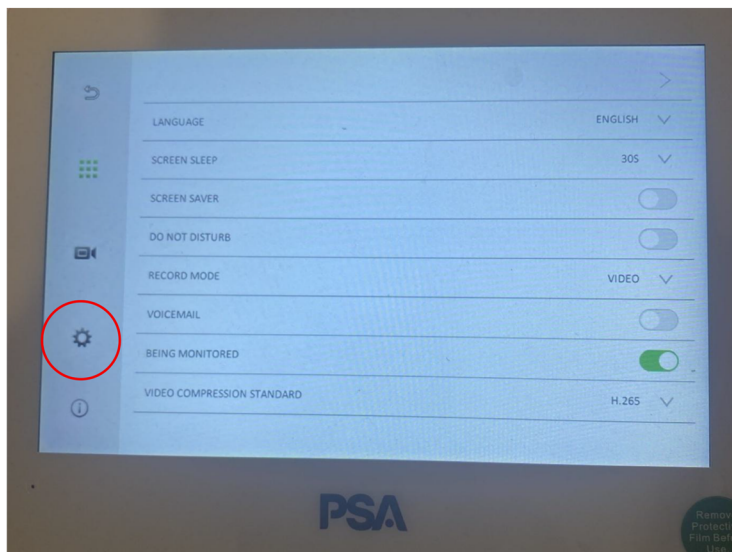


3. Tap on CONFIGURATION

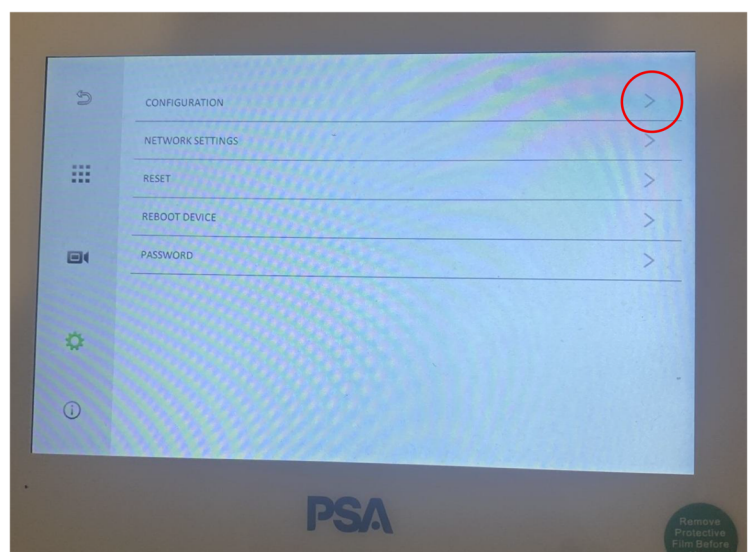

4. Tap on ADD NEW DEVICES

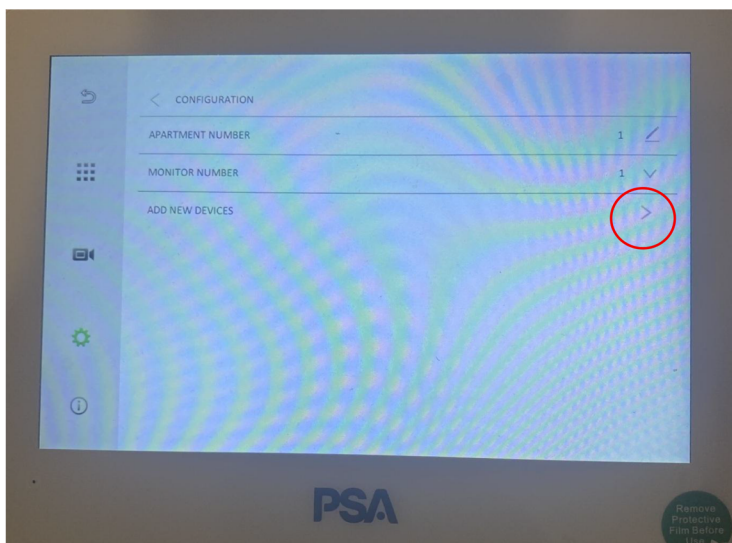


5. Tap on + symbol to add IP camera to intercom

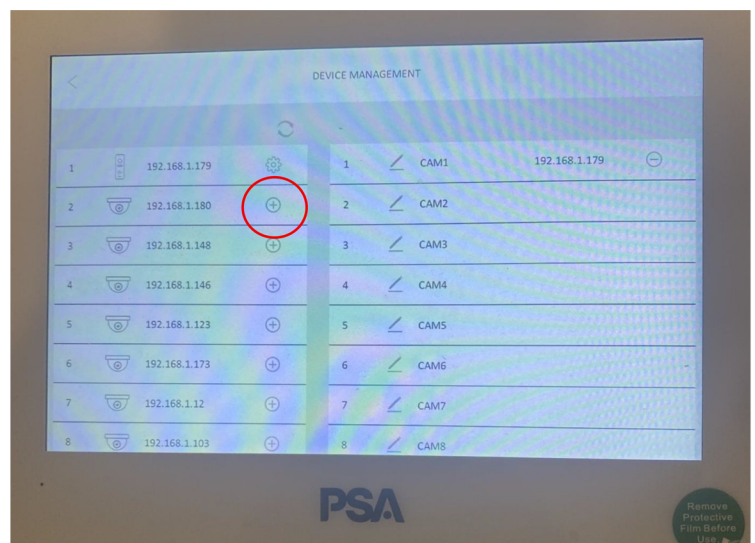


CONNECT 5MP CCTV CAMERA TO IP INTERCOM VIA SWITCH

6. Enter username "admin" and password "admin"

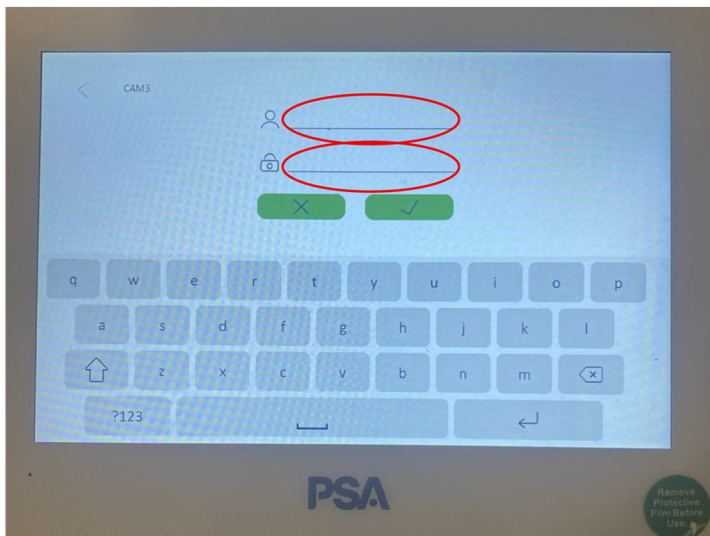

7. IP camera will now add to right column

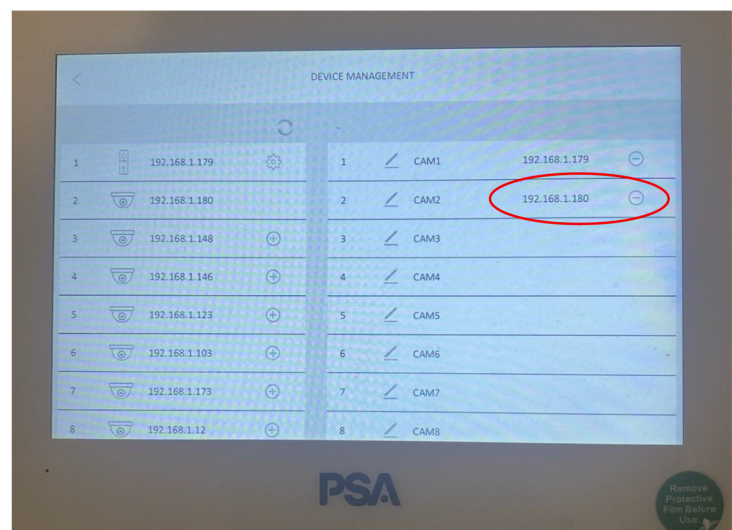

8. Tap on VIEW to view door station and IP camera/s



NOTE: If more IP cameras or a CCTV system is to be added, a larger PoE switch is required.